

INSTRUCTION BOOK

MD7A, MD7A/110S

**VOLVO
PENTA**

FOREWORD

Before you start your new Volvo Penta marine engine, you are advised to read through this instruction book carefully. It contains information relevant to the proper operation and maintenance of your engine.

Volvo Penta has built up an extensive service organization with service workshops and specially trained personnel at your service.

Always contact your local Volvo Penta representative for advice and when in need of service and parts.

WARRANTY CERTIFICATE

A warranty certificate is supplied with each new engine. It contains the warranty conditions for the engine and should be studied carefully.

Included in the warranty certificate is a report card which is to be completed by the dealer or boat seller and forwarded to Volvo Penta.

However, if our warranty is to apply, it is an absolute condition that the measures given in the "Check and Service Scheme" are carried out and that your engine and equipment are looked after according to the instructions in this book. When in doubt, always get in touch with an authorized Volvo Penta dealer.

In all correspondence with your dealer and when ordering parts, always state the type and designation and serial number of the engine and reverse gear or drive (see starboard side of engine).


Make certain that the engine's specification coincides with what is described in this instruction book.

AB VOLVO PENTA
Technical Publications Dept.

Instruments and Controls	2
General Information	3-4
Running Instructions	5-7
Starting the engine	5
Running	6
Shutdown Procedure	6
Technical Description	8-11
Checks and Service Scheme	12
Checks and Service	13-23
Daily checks before starting	13
Checks every 14 days	13-14
Service every 50 hours of operation	15-16
Service every 100 hours of operation	17-22
Venting the fuel system	23
Service when laying up and launching	24-28
Fault Tracing Scheme	29
Technical Data	30-31
Wiring Diagram	32
On Board Data	33
Engine Component Guides	34-35
Index, alphabetical order	36


INSTRUMENTS AND CONTROLS

INSTRUMENT PANEL

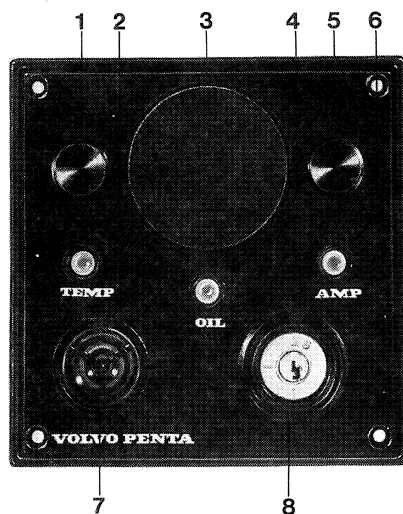

1. Switch, extra lighting
2. Warning lamp, "high temperature"
3. Location for instrument (dia 52 mm, optional equipm.)
4. Warning lamp, "low oil pressure"
5. Switch, extra lighting
6. Warning lamp, "no battery charging"
7. Buzzer, "low oil pressure, high temperature"
8. Key switch

CONTROL SYSTEM

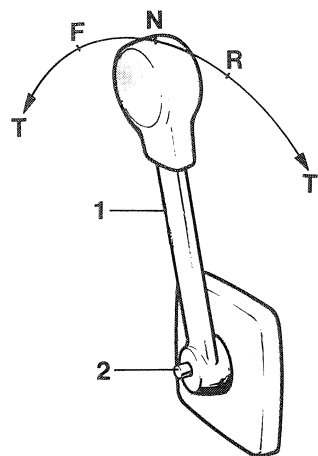

Volvo Penta Single Control System

For side mounting

1. **Control lever**
 2. **Disengaging button**
Push in the button when the control lever is in neutral and move the lever a bit forwards. Release button. The lever is now used only for engine speed control.
To use the lever for both engine speed control and gear shifting, pull back the lever to neutral position and move it again "Forward" or "Reverse".
- N = Neutral position
F = Control lever in position for running "forward".
R = Control lever in position for running "reverse"
T = Engine speed control

GENERAL INFORMATION

Important information on the function of your engine.

FUEL

Use diesel fuel oil of quality "Autodiesel". Lower fuel quality can cause interruptions in operation.

LUBRICATING OIL

Use only oil of quality CD (DS) according to the API-System. Volvo Penta oil for diesel engines can be used with advantage, since it meets these quality demands. See under "Technical Data" concerning viscosity if any other oil is used.

RUNNING IN

A new marine engine must be run-in with due care during the first 20 hours of operation. If full output is required during this time, it should be used for short periods only.

Oil change. Change the engine oil and oil filter after the engine has been run for 20 hours. See further under "Checks and Service".

ENGINE SPEED

Max engine speed: MD7A 43,4 r/s (2600 rpm).

In order to select the proper propeller, reference is made to the Volvo Penta propeller diagram. Check the engine speed with normal load in the boat. In order to obtain maximum engine performance, an engine speed as high as possible should be chosen, however, not higher than 43,3 r/s (2600 rpm).

NOTE! When the boat has been in the water for some time, the speed of the boat and the engine rpm can drop, due to marine growth on the hull. Prevent marine growth by painting the bottom of the boat with anti-fouling paint. If the boat is equipped with S-drive model MD7A/110S – or any other S-drive model – it is important not to use an anti-fouling paint which contains copper. See further "Service in connection with launching".

GENERAL INFORMATION

SAFETY EQUIPMENT

Irrespective of whether the boat is being used for long cruises or short bathing trips, the boat should be equipped with the safety equipment listed below. It can, of course, be supplemented further according to personal tastes. Investigate at regular intervals to ensure that there is safety equipment on board and that it is in working order.

LIFE JACKETS for all on board

FIRE EXTINGUISHER, approved, at least one and installed where it is easy to get at.

DISTRESS ROCKETS and matches. Packed watertight.

FIRST AID BOX

TOOLS suitable for the equipment on board

ON BOARD KIT containing, e.g. impeller, etc.

ANCHOR with line.

RADAR REFLECTOR

RADIO for listening to e.g. weather reports.

COMPASS (with deviation tables)

BOAT HOOK and **PADDLE**

MOORING ROPES

FOGHORN or whistle

FLOATING ANCHOR

TORCH spotlight

PREPARATIONS BEFORE STARTING

Make sure that:

There is no **FUEL LEAKAGE**

There is no **WATER LEAKAGE** from the engine and hull

There is no **OIL LEAKAGE**

There is no **SMELL OF LP GAS** in the deep cavities in the boat or elsewhere

The **OIL LEVEL** is correct.









There is enough **FUEL** for the planned voyage.

The proper **NAUTICAL CHARTS** are on board for the planned voyage.

If there are persons on board who have never been in a boat before, inform them how the boat functions and where the Life Jackets and Fire Extinguisher are located. Also inform them of anything more you think necessary from a safety point of view. Should anything unexpected happen during the voyage, it is often too late to tell those on board how safety equipment works.




RUNNING INSTRUCTIONS

START THE ENGINE

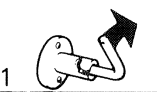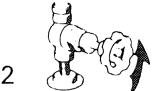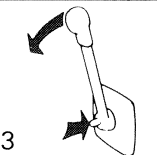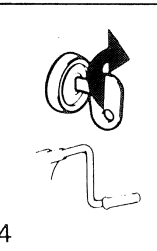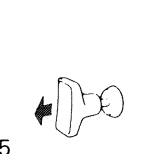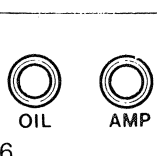
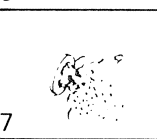
	Switch on the main switch . Start the engine room fan (if fitted) and let it run for several minutes before starting the engine.
	Check that cocks for fuel and water intake are open. If water in the boat, use bilge pump and drain the boat.
	Disengage the engine speed control from the gear shifting as follows: Move the control lever to neutral, push-in the red disengaging button, and move the lever slightly forwards. Release the button. The lever can now operate the engine speed only. Check and make sure that the stop control is pushed in.
	Turn the key switch one position to the right. The warning lamps for battery charging and oil pressure should now go on. If there is an alarm system fitted, the buzzer should sound. Push-in and turn the key further to the right to start the engine. Release the key when the engine starts. Handstarter. When the engine is started with the starting crank, the de-compression handle (see pages 34–35) on the rockerarm cover should be raised upright. Return the de-compression handle for running when the engine has been cranked up in speed.
	Cold weather starting. CAV fuel injection pump: Starting is facilitated if the coldstart control is pulled out. The cold-start control must be pushed in after the engine has started. BOSCH fuel injection pump: The engine has a built-in automatic cold-start device.
	Check immediately after starting that the warning lamps for oil pressure, battery charging and temperature are out and that the buzzer is silent. If any of the lamps are alight and if the buzzer is sounding, the engine must be stopped immediately and the cause investigated.
	Run the engine warm at rapid idling. Check to make sure that the cooling water flows out together with the exhaust gases. Note. The key-switch should always be switched on as long as the engine is running to ensure battery charging.
	Reduce speed to idling and check that the engine is running smoothly. Reconnect gear shifting as follows: Pull the lever to neutral position. The gear shifting is now automatically linked again to the engine speed control.

RUNNING INSTRUCTIONS




RUNNING

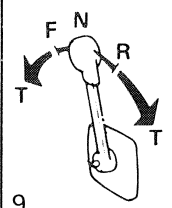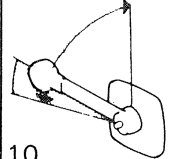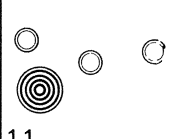 <p>9</p>	<p>The single lever control contains engine speed as well as gear shifting functions.</p> <p>NOTE! If the boat is equipped with a folding type of propeller, the engine speed must be reduced to idling prior to shifting to "FORWARD". Shifting at higher engine speed might easily damage the propeller.</p> <p>F = Forward N = Neutral R = Reverse T = Throttle</p>
 <p>10</p>	<p>In order to achieve a good running economy, the engine should not be run at maximum engine speed for long periods of time.</p>
 <p>11</p>	<p>Check regularly during running that the warning lamp for battery charging is out. Should the cooling water temperature be too high or the oil pressure too low, the buzzer will warn you, at the same time the relevant warning lamp goes on.</p> <p>If this happens, the engine must be stopped immediately and the reason investigated.</p>


SHUTDOWN PROCEDURE

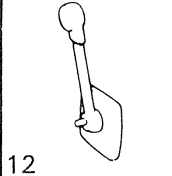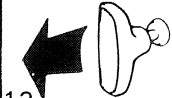 <p>12</p>	<p>Before shutdown the engine should be allowed to idle for a few minutes with the control lever in neutral.</p>
 <p>13</p>	<p>Stop the engine by pulling the stop control when the engine is idling. Then turn back the key switch to the initial position.</p>

RUNNING INSTRUCTIONS

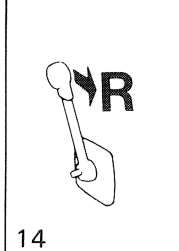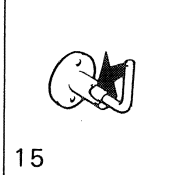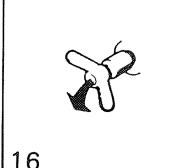 <p>14</p>	<p>Folding propeller, S-drive. When switching from engine operated running to sailing the propeller rotation is stopped by engaging reverse gear. When sailing maintain the control lever in the reverse position.</p> <p>Fixed propeller. When sailing the control lever should be in the neutral or reverse position. During long sailing trips with the control lever in the neutral position, the engine should be run for some time every tenth hour in order to ensure lubrication in the drive or reverse gear.</p>
 <p>15</p>	<p>Switch off the main switch. NOTE! The main switch must never be switched off before the engine has stopped completely (the charging regulator can be damaged).</p> <p>Close the fuel and cooling water cocks if the boat is not going to be used for some time.</p> <p>Check for leakages before leaving the boat.</p>
 <p>16</p>	<p>In cold weather and whenever there is a risk of temperatures below zero, the cooling water must be drained off from the engine and the reverse gear. Close the cock on the cooling water intake, (S-drive model 110S: See page 19). Close all the drainage cocks if the boat is left without regular supervision. An incorrectly performed draining can result in a sunken boat. (See positions 15 and 16, page 34).</p>

TECHNICAL DESCRIPTION

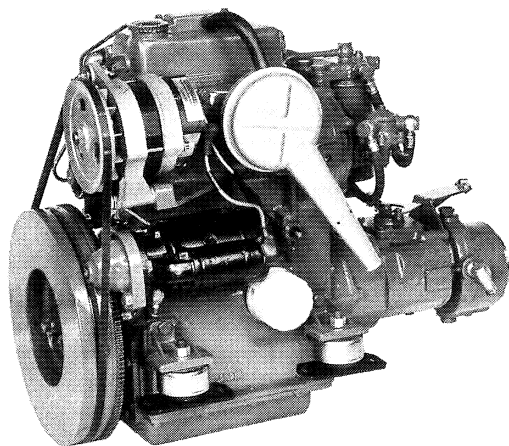

MD7A is a 2 cylinder, 4 stroke, marine diesel engine with direct injection and sea water cooling.

ENGINE ASSEMBLY

The cylinder block and cylinder head are made of cast iron. The engine has overhead valves.

LUBRICATION SYSTEM

The lubrication system has a full-flow oil filter which cleans the oil before it reaches the lubrication points. The oil pump has a relief valve which prevents the oil pressure from becoming excessive.

ELECTRICAL SYSTEM

The engine has a starter motor and an alternator with a built-in rectifier. Voltage regulation is performed by a transistorized regulator, mounted on the alternator. The alternator can charge two batteries, independent of each other, if a double-diode (accessory) is fitted to the alternator.

A main fuse, which can be easily reconnected, is attached to the engine. It protects the electrical system from damage in the event of overloading. The wiring diagrams for the engine and instrument panel are shown on page 32.

TECHNICAL DESCRIPTION

FUEL SYSTEM

The fuel system has a feed pump with a fine filter, fuel filter with a fine filter insert, injection pump and injectors. The feed pump is of the diaphragm type and is equipped with a hand priming lever.


There is a built-in cold-start device in the fuel injection pump. On the CAV fuel injection pump the cold-start device is operated manually and on the BOSCH fuel injection pump the cold-start device is operated automatically.

COOLING SYSTEM

The engine is cooled by sea water. The cooling system has a sea water pump and a water distribution housing with a thermostat.

The sea water pump has an impeller made of neoprene rubber, which is driven via a rubber flange from the camshaft.

The thermostat in the water distribution housing regulates the water flow, so that water is always flowing in the exhaust manifold and out in the exhaust elbow, regardless of whether the engine is cold or hot.

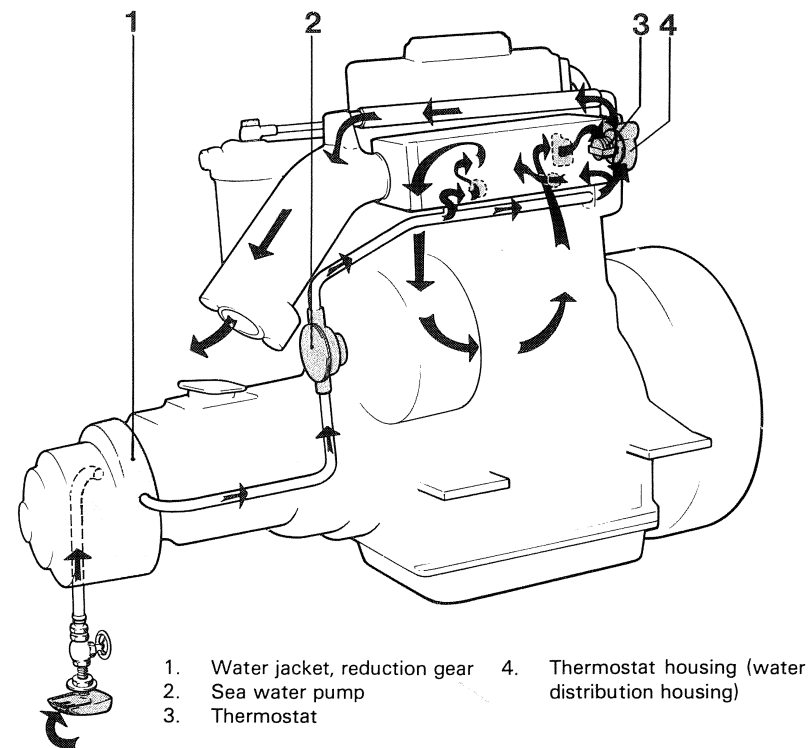


TECHNICAL DESCRIPTION

REVERSE GEAR (MD7A/MSB)

The reduction gear is integrally built with the reverse gear. The power from the engine to the reverse gear is transmitted via a rubber flange carrier.

For operating "Forward" and "Reverse" the Volvo Penta patented cone clutch is used, which ensures smooth and quiet engagement. Very small forces are required to operate the reverse gear.

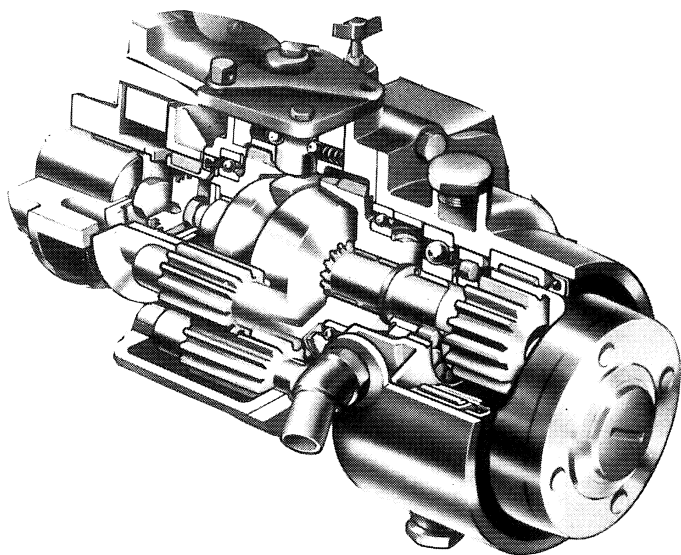


Reverse Gear type Mono Shift (MSB).

TECHNICAL DESCRIPTION

S-DRIVE MODEL 110S (MD7A/110S)

The power from the engine is transmitted via rubber flange carrier to the S-Drive.

For operating "Forward" and "Reverse" the Volvo Penta patented cone clutch is used, which ensures smooth and quiet engagement. Very small forces are required to operate the shifting.

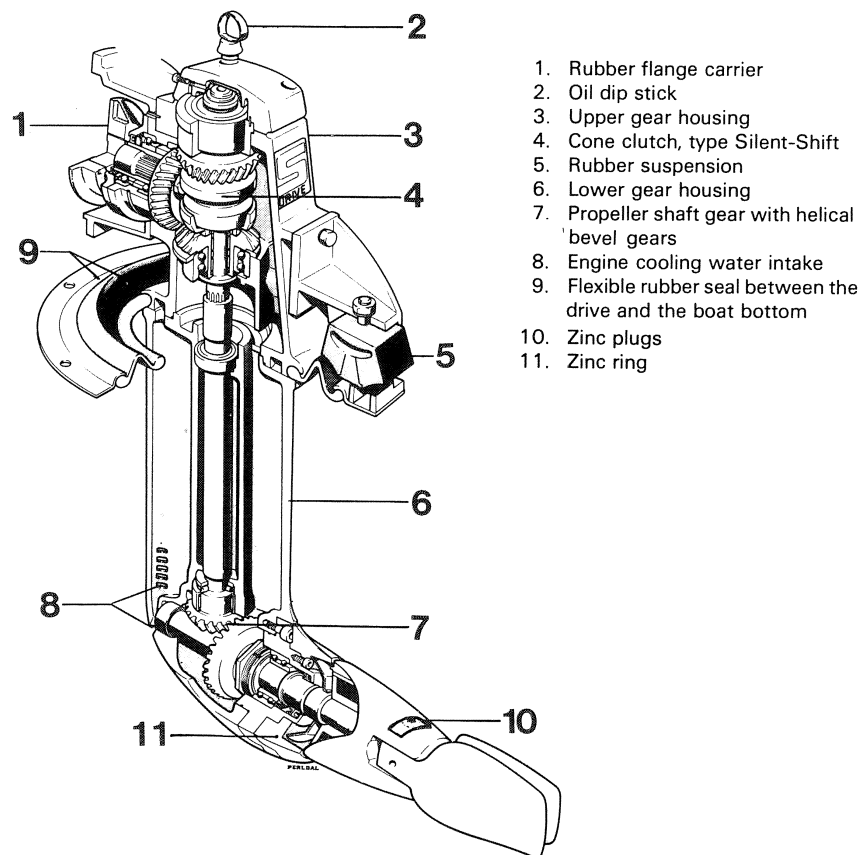

1. Rubber flange carrier
2. Oil dip stick
3. Upper gear housing
4. Cone clutch, type Silent-Shift
5. Rubber suspension
6. Lower gear housing
7. Propeller shaft gear with helical bevel gears
8. Engine cooling water intake
9. Flexible rubber seal between the drive and the boat bottom
10. Zinc plugs
11. Zinc ring

CHECKS AND SERVICE SCHEME

Checks and service should be carried out regularly in accordance with the intervals given below. Let an authorized Volvo Penta Service Work Shop look after your engine.

CHECK DAILY BEFORE STARTING that

The oil level in the engine is between the marks on the dipstick 13

CHECK EVERY 14 DAYS that

The oil level in the reverse gear is between the mark on the dipstick 13
The oil level in the S-Drive is between the marks on the dipstick 14
The electrolyte level in the battery is correct 14
The belt tension is sufficient to prevent the alternator from slipping 14

SERVICE EVERY 50 HOURS OF OPERATION

Change the engine lubrication oil 15
Change the reverse gear lubrication oil (every 200 hours) 15
Change the lubrication oil in the S-Drive model 110S 16
Valve clearance. Checking and adjusting 16

SERVICE EVERY 100 HOURS OF OPERATION OR AT LEAST ONCE PER SEASON

Change the oil filter 17
Clean the air filter 17
Checking and changing the alternator V-belt 18
Check-tightening the cylinder head nuts 18
Zinc-anodes, propeller (model 110S) 18
Check the cooling system 19
Electrical System. Checking and changing fuses 20, 21
Check the fuel system, filter, strainer, injectors, injection pump, venting .. 21-23


SERVICE WHEN LAYING UP AND LAUNCHING THE BOAT

Inhibiting scheme 24
Service when launching 27


CHECKS AND SERVICE

CHECK DAILY BEFORE STARTING

OIL LEVEL IN ENGINE

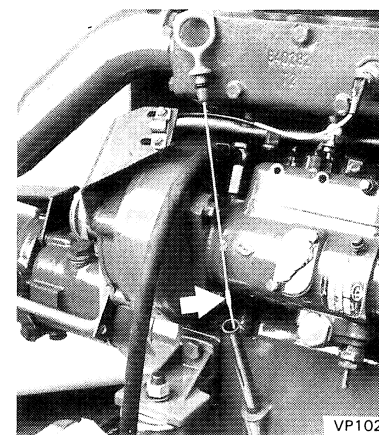


Each day before starting, check that the oil level is between the marks on the dipstick. Top up with oil if necessary, through the oil filler hole. NOTE. Do not top up above the max. marker. Concerning the choice of oil, see under "Technical Data".

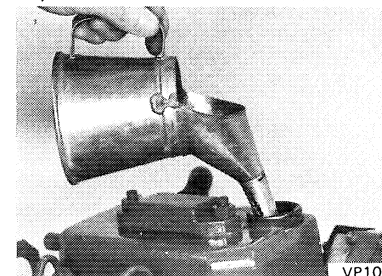

CHECKS EVERY 14 days


OIL LEVEL IN REVERSE GEAR

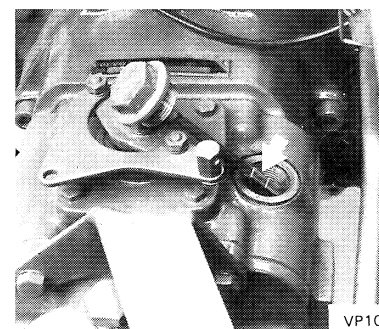

Unscrew the dipstick, wipe it clean and insert it again without screwing it down. Pull up the dipstick and check the oil level, which should be between the marks. If necessary top up with oil. Do not top up above the Max mark.

Screw down the dipstick again. Note that there is a sealing washer on the dipstick. Concerning choice of oil, see under "Technical Data".

CHECKS AND SERVICE

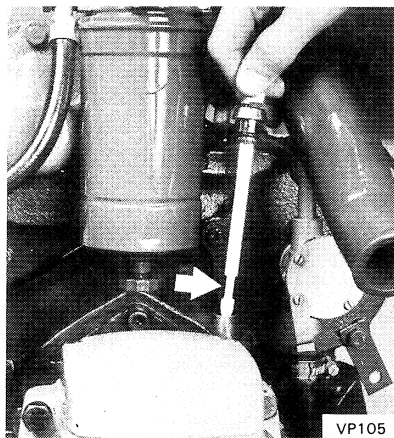

VP105

THE OIL LEVEL IN THE S-DRIVE

Check every 14 days that the oil level is within the marks on the dipstick.


The oil dipstick is provided with a bayonet-type of attachment. Therefore it has to be turned prior to removal and reinsertion. Note the seal underneath the oil dipstick-head. When checking the oil-level, the dipstick has to be turned to the locked position.

When topping-up oil, top-up through the oil dipstick-hole. NOTE! Do not top-up above the upper mark on the dipstick. Concerning choice of oil, see "Technical Data", page 30.

THE ELECTROLYTE LEVEL IN THE BATTERY

The level should be between 5–10 mm (3/16–3/8") above the cell plates in the battery. If necessary top-up with distilled water. NOTE! Exercise great care when doing this. The electrolyte is corrosive and the gas being formed is explosive.

THE BELT TENSION

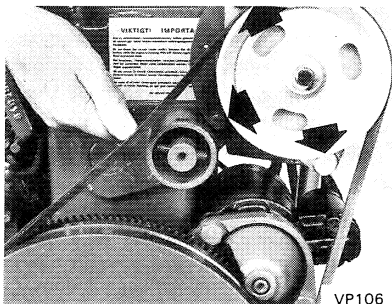

VP106

Correct belt tension is necessary for full alternator output. The belt should be tensioned in such a way that it can be depressed 5 mm (3/16") with the thumb midway between the pulleys.


The belt can be tensioned after loosening the alternator mounting bolts.

A well worn or cracked alternator belt should be replaced. See page 18.

CHECKS AND SERVICE

SERVICE EVERY 50 HOURS OF OPERATION

OIL CHANGE IN ENGINE

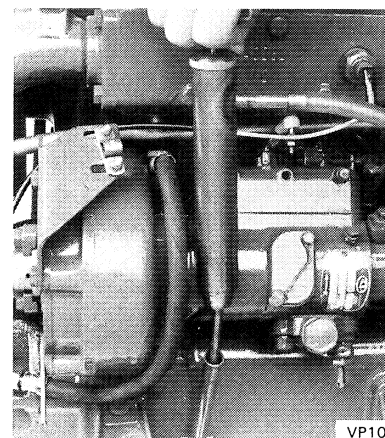

VP107


With a new or newly reconditioned engine, the oil should be changed for the first time after 20 hours of operation, and thereafter every 50 hours of operation.

Run the engine warm. Suck up the oil with a pump through the dipstick hole.

Fill with oil to the correct level. Concerning the choice of oil, see under "Technical Data".

NOTE. Also change the oil filter at every second change of oil. See page 17.

OIL CHANGE IN REVERSE GEAR (every 200 hours of operation or at least once per season)

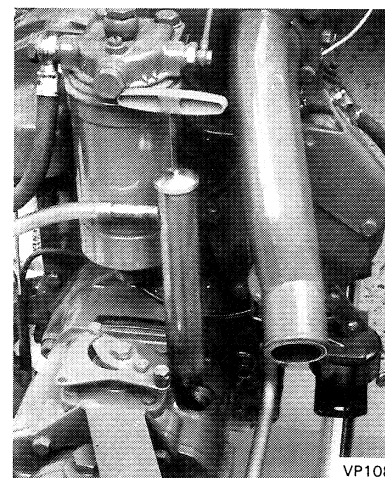


VP108

The oil can be drained from the reverse gear by removing the plugs under the reverse and reduction gears respectively (see Engine Component Guide), or by sucking up the oil through the dipstick hole with the help of an oil scavenging pump.

Fill with oil through the filler hole to the correct level. NOTE. Do not fill above the Max mark on the dipstick. See choice of oil, concerning "Technical Data".

CHECKS AND SERVICE


OIL CHANGE IN THE S-DRIVE (every 200 hours of operation or at least once per season).

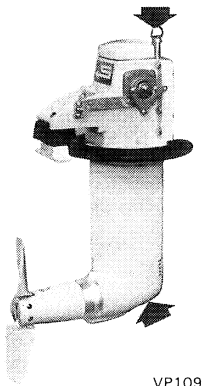

VP109

Remove the oil dipstick. Remove the plug underneath the propeller gear housing and let the oil drain off. Install the plug with its O-ring. Fill oil through the oil dipstick hole. The oil level shall be within the oil dipstick marks. NOTE! Do not fill oil above the upper oil dipstick mark. Concerning the choice of oil, see "Technical Data", page 30.

VALVE CLEARANCE

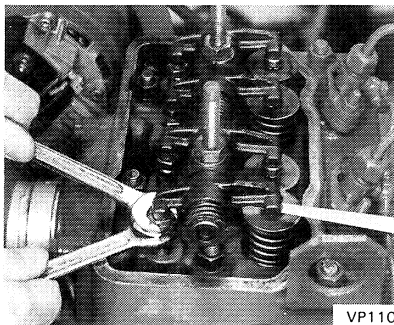

VP110


Checking and adjusting the valve clearance should be done by an authorized Volvo Penta Service Workshop. See further under "Valves – Technical Data".

CHECKS AND SERVICE

SERVICE EVERY 100 HOURS OF OPERATION OR AT LEAST ONCE EACH SEASON

OIL FILTER

The oil filter should be replaced for the first time after 20 hours of operation during the running-in period and subsequently at every other oil change. Unscrew and discard the oil filter.

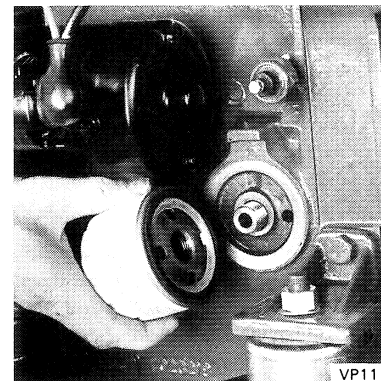

VP111


Coat the new oil filter's rubber seal with oil. Check the contact surface on the engine and screw in the filter by hand until it touches the contact surface. Turn the filter a further half turn, not more.

NOTE. Use only genuine Volvo oil filters.

Start the engine, run at idling and check that the oil pressure lamp goes out.

Check oil level and that there are no leaks from the contact surface of the oil filter.

CLEANING OF AIR FILTER

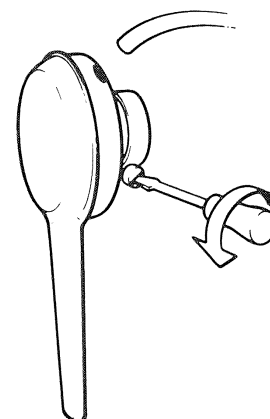

The air filter should be removed and cleaned after every 100 hours of operation or once per season.


Loosen the clamp with a screwdriver and remove the filter.

Clean the filter with diesel fuel and blow it clean with a compressed air gun. Soak it in thin engine oil.

Let the engine oil drain off and refit the filter.


CHECKS AND SERVICE

CHECKING AND REPLACING THE V-BELT

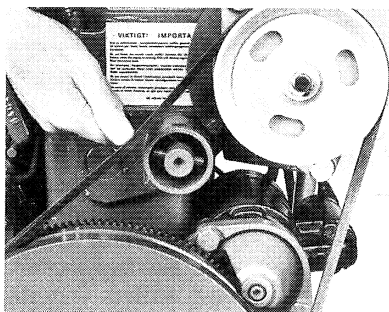


Check the belt carefully, both for wear and cracks. Any sign of such, then the belt must be replaced. Loosen the alternator mounting bolts so that the belt can be removed. Clean the pulley grooves before fitting the new belt. Tension the belt so that the belt can only be depressed 5 mm (3/16") midway between the pulleys. After a few hours running, recheck belt tension and adjust if necessary.

RETIGHTENING CYLINDER HEAD NUTS

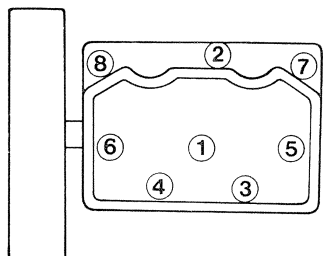

Retighten each nut with a torque wrench before starting a new engine or an overhauled engine for the first time, and then after 20 hours of operation. The valve clearance should always be checked after the nuts have been retightened. Sequence for tightening the nuts is shown in the figure opposite.

ZINC-ANODE, PROPELLER (S-DRIVE 110S)

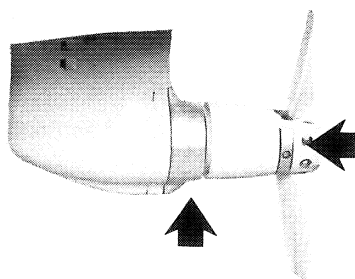

Replace the zinc-anode if it is eaten away to more than 50 %. Remove the propeller and the spacer-ring with deflector and remove the Allen-head screws, holding the zinc-anode. Clean the contact surface on the S-Drive and install a new zinc-anode. Be careful to obtain a good metallic contact between the S-Drive and the zinc-anode. Also replace the zinc-anodes on the S-Drive when eaten away to more than 50 %. **NOTE!** Do not paint the zinc-anodes.


Check to make certain that the propeller-blades are folding easily, see "Inhibiting Scheme", page 26, paragr 13.

CHECKS AND SERVICE

CHECKING THE COOLING SYSTEM

The cooling system is functioning properly when the temperature warning lamp is out and the buzzer is silent. Too high water temperature (the warning lamp is on and the buzzer is sounding) can be due to the following reasons: Blocked water intake, defective impeller or defective sea water pump carrier, faulty thermostat or temperature sender. **NOTE!** When working on the cooling system, be careful and avoid water coming into the boat.


CHECKING AND CHANGING THE IMPELLER

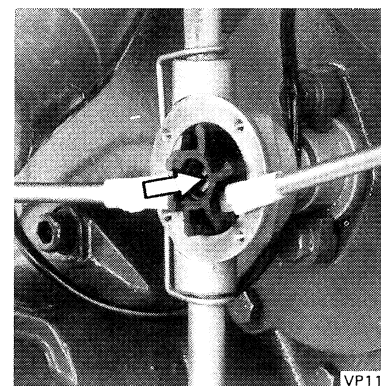

The impeller can be damaged by lack of water among other things. **Close the bottom intake valve.** Remove the sea water pump cover. If it proves necessary to replace the impeller, pull out the impeller and the shaft as far as necessary to reach the screw in the impeller hub. **NOTE!** On earlier executions: Do not pull out the shaft farther than that, since the sealing rings can be damaged when the shaft is pushed back. Remove the locking screw, (on earlier executions hold back the shaft) pull off the impeller. Install a new impeller, tighten the screw and push the shaft back into position.

The carrier is defective if the impeller and the shaft can be turned. A new carrier can be installed after having removed the pump. Install the water pump cover, using a new gasket. **Open the bottom intake valve.**



COOLING SYSTEM S-DRIVE MODELL 100S

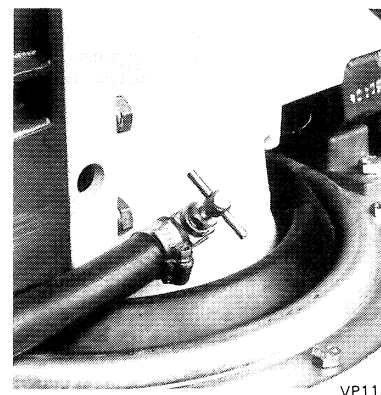

The cooling water intake for the cooling of the engine is located in the lower gear housing of the S-Drive. Check, while the boat is on land, that the gillformed water-intake and the hole in the lower front edge of the S-Drive are free from marine growth. When inhibiting or when there is risk of temperatures below zero, drain off the cooling water from the S-Drive and the pump by removing the cooling water hose from the cock on the S-Drive.

NOTE! If draining with the boat in the water, close the cock prior to start of draining. Incorrect draining might easily end up with a sunken boat. **Do not forget** to open the cock prior to starting the engine.

ELECTRICAL SYSTEM

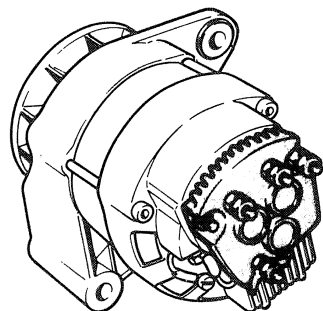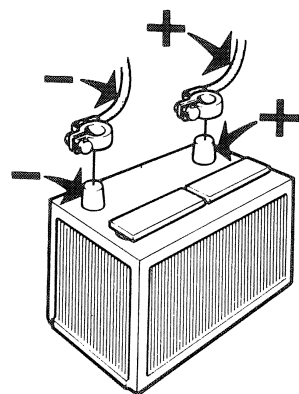

Alternator

The engine is equipped with an alternator. To ensure that the alternator, with the built-on regulator, functions without interruptions, the following important points must be observed:

1. **The main switch must never be switched off until the engine has stopped.**

Otherwise the charging regulator will be ruined.

2. **The battery connection poles must never be mixed up.** A plus sign and a minus sign are marked on the respective poles. The minus pole is connected to the cylinder block. The cable terminals should be greased and well tightened.

3. **Switching between the charging circuits may not be carried out while the engine is running.**

Fit a Volvo Penta charging distributor (accessory) on the alternator when more than one battery is connected.


4. **Observe the following whenever the engine is started with an auxiliary battery:**

Let the ordinary battery remain connected. Connect the auxiliary battery to the ordinary battery, plus to plus and minus to minus. When the engine has started, remove the auxiliary battery, but do not break the ordinary battery's wiring circuit.

5. Do not use a rapid charging unit when the alternator is connected to the battery.
6. Disconnect both the battery cables before doing any work on the alternator equipment.
7. When electrical welding work performed on the engine or installation components, disconnect the charging regulator cables at the alternator and insulate the cable ends.
8. Check regularly the belt tension and the cable connections.

Changing the fuse

A fusebox is mounted on the engine. The fuse breaks the electrical system when overloaded. Re-connect the electrical system by transferring the cable connection to the next fuse contact.

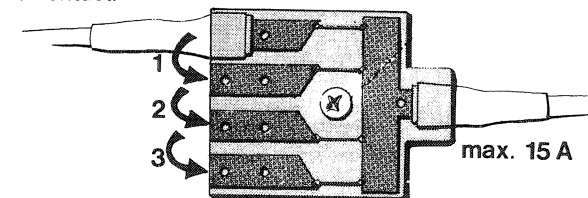

Starter motor and alternator

All service work connected with the starter motor and alternator should be done by an authorized service workshop.

Inspection and control should be carried out in connection with a general inspection of the engine.

BATTERY


Checking the state of the battery charge

The charging of the battery should be checked at least once each season. This is done by using a hydrometer, which shows the specific gravity of the electrolyte, this varying with the state of the charge. (See "Technical Data").

FUEL SYSTEM

Observe the greatest cleanliness when working on the fuel system. NOTE! Try to avoid spilling fuel!

Changing the fuel filter

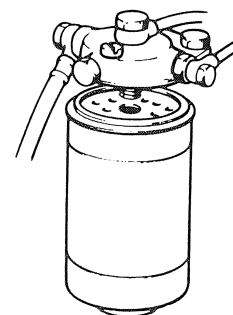


The fuel filter must be replaced at least once per season. NOTE! If an extra fuel filter is installed in the boat, this filter or filter element must be replaced as well.

Remove the filter, if necessary push a screwdriver through the filter and use the screwdriver as a lever. NOTE! Be careful not to spill oil. The fine-filter is a throw-away-type of filter. Therefore throw away the old filter and install a new one. Check that the contact surface of the oil filter housing is clean and that the oil filter

CHECKS AND SERVICE


gasket is undamaged. Install the new filter by hand until the gasket touches the contact surface of the housing. Then turn the filter a further 1/2 turn. Vent the fuel system (see page 23) and check for leakage.

Extra fuel filter

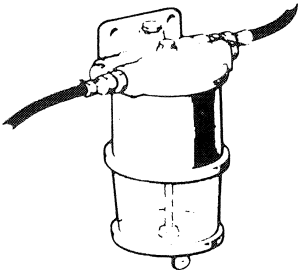

If an extra fuel filter with water separator is fitted, check the transparent bowl to see if there is any water in the fuel. If necessary, drain the filter via the cock in the bottom of the bowl. Try to avoid spilling fuel. Pump up the fuel and vent the system. The fuel filter element should be changed at least once each season.

Fuel strainer

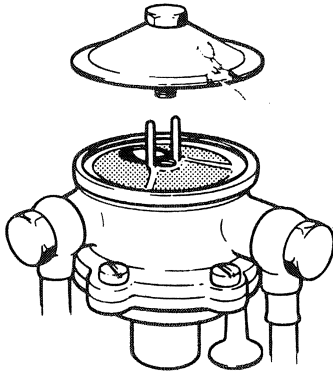

The fuel pump on the engine has a built-in strainer, which can be removed by removing the pump's cover. The strainer must be cleaned at least once per season. Always vent the fuel system. See "Venting of Fuel System" (page 23). **Check immediately after starting that there is no fuel leakage.**

Injectors





All work on the engine injectors shall be carried out by an authorized Volvo Penta Service Workshop. Each third season the injectors should be handed over to a diesel workshop for cleaning and for checking the opening pressure, leakage and spray pattern.

CHECKS AND SERVICE

Venting the fuel system

Venting of the fuel system must be carried out prior to the first start of the engine and after work has been carried out on the fuel system, when the fuel tank has been run empty or if the engine has been out of operation for some time.

Venting is carried out as follows: (Regarding location, See Engine Component Guide).

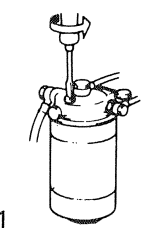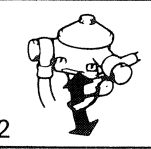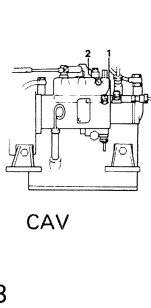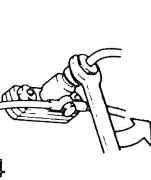 1	Open venting screw on the fuel filter about 4 turns. Be careful not to spill fuel. Use rags around the vent opening.
 2	Pump up the fuel by using the hand primer until fuel, free from air bubbles flows out. Close venting screw. If the pump action is poor, turn the engine so that the cam driving the pump changes position.
 3	If the injection pump has been removed, or when first starting a new engine, the injection pump must be vented. BOSCH Fuel Injection pump: Operate the handprimer for approx half a minute. The injection pump is then automatically vented. CAV Fuel Injection pump has two air venting screws, see picture. Vent No 1 and then No 2. Operate handprimer until fuel free from air bubbles flows out at screw No 1. Tighten screw No 1. Put throttle control lever in position full speed and turn engine using starter motor until fuel free from air bubbles flows out of screw No 2. Tighten screw No 2.
 4	Loosen the injector's delivery pipe nut, push in the stop control and put the throttle control lever in the full speed position. Turn the engine using the starter motor until fuel flows out of the delivery pipes. Be careful not to spill fuel! Use rags around the venting location. Tighten delivery pipe nuts and start the engine.

LAYING-UP AND LAUNCHING



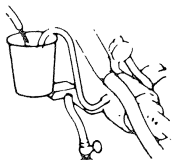
SERVICE IN CONNECTION WITH LAYING-UP AND LAUNCHING THE BOAT, INHIBITING THE ENGINE AND REVERSE GEAR

Idle engine for short periods of time, with the boat in the water


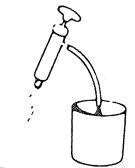
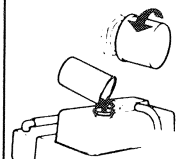

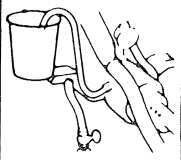
In order to prevent damage to the engine caused by corrosion, the engine should be run warm at least every 14 days as long as the boat is in the water. If the boat is not to be used for over a month, a long-term inhibiting should be carried out.

Inhibiting for the winter lay-up



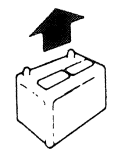
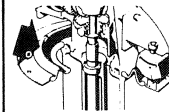
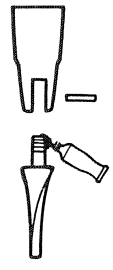
Prior to inhibiting the engine for the winter lay-up, an authorized Volvo Penta Service Workshop should test the engine and the equipment. It is advisable to check the compression in order to find out the condition of the engine. If the inhibiting work can be made directly after the boat is out of the water, it is advisable to run the engine warm in the water. This will facilitate the oil change.

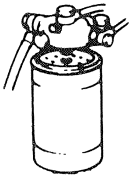INHIBITING SCHEME	
Carried out with the boat on land	
1 	Change fuel filter. If an extra fuel filter is installed, drain water and impurities and replace the filter insert. Pump up fuel and vent the system. See "Venting the fuel system", page 23. Check out the system for leakages.
2 	Drain the cooling water from the engine and the reverse gear (paragraphs 15 and 16, page 34). Check to make sure that the water drains off, since impurities can block the cock. Then close the cock and install the plug in the reverse gear.
3 	Remove the suction line from the reverse gear (MD7A/MSB) and from the cooling water pump (MD7A/110S). Install a hose with an inner diameter of 1/2" and insert the free end into a container with fresh water. Make sure to have additional water at hand to fill the container.



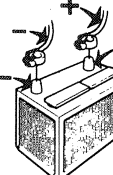
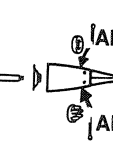
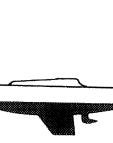
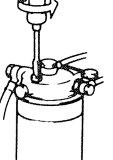
LAYING-UP AND LAUNCHING

4 	Run the engine at idle for 5–10 minutes in order to thoroughly flush the engine with fresh water. Make sure that the exhaust does not splash vital objects. Drain all water from engine and reverse gear. Then close all draining cocks. NOTE! Do not let the propeller rotate!
5 	Remove all oil from the engine and from the reverse gear and S-Drive respectively.
6 	Change oil filter. Fill up the engine, reverse gear and S-Drive respectively to the correct level. Use the Volvo Penta diesel engine oil with protective properties against corrosion. Now the engine is ready to run on this oil during the coming season. Always use a special inhibiting oil if the lay-up will exceed one normal winter lay-up. This inhibiting oil should be of the type Esso Rustban 623, Shell Ensio Oil or of an equivalent type. If inhibiting oil is used the oil filter must be replaced at the time of launching the boat.
7 	Prepare a rust-protection-mixture consisting of fresh water and 5 % Volvo Penta rust-protection-oil and emulsifying oil. NOTE! Water first and then the oil. Following rust-protection-oils can also be used: Esso Cutwell 40, Shell Donax C or equivalent rust-protection-oils. As an alternative to these oils a 40 % Ethylene Glycol-mixture can also be used. Following for MD7A with reverse gear: A Ethylene-Glycol-mixture must be used when and if the engine inclination exceeds 10°. Otherwise the water, which still remains, can cause damage due to freezing.
8 	Insert the hose into the rust-protection-mixture. Start the engine and let it run in idling until the mixture is finished. NOTE! The cooling water pump will be damaged if it runs without water.

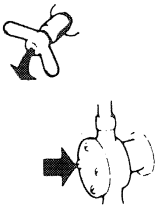

LAYING-UP AND LAUNCHING

 <p>9</p>	<p>Since the rust-protection-mixture does not give protection against freezing, it has to be drained off from the engine and the reverse gear (paragraphs 15 and 16, page 34). There is no need to drain off the Ethylene Glycol-mixture. Remove the cover from the cooling water pump. Check the impeller for possible damage. NOTE! Do not pull out the impeller if it is undamaged. Install the cover, using a new, genuine gasket. Install the cooling water hose between the cooling water intake and reverse gear and the water pump (MD7A/110S) respectively. Close all draining cocks. If a vacuum-valve is installed, it has to be disassembled and salt-sediments cleaned away.</p>
 <p>10</p>	<p>Clean the outside of engine and reverse gear. Touch-in any bare patches in the paintwork with the original type of paint. Spray the components of the electrical system, and all the control components with anti-moisture spray.</p>
 <p>11</p>	<p>Remove the battery. For proper maintenance it needs to be charged to prevent it from being damaged.</p>
 <p>12</p>	<p>Check the flexible rubber seal between the S-Drive and the engine foundation for elasticity and that it is free from mechanical damage. The flexible rubber seal must be replaced each 5th year. Check further that the rubber seal underneath on the boat and around the S-Drive is properly located.</p>
 <p>13</p>	<p>Following concerns the folding propeller: Remove the propeller from the S-Drive. Clean the propeller in fresh water, remove the screws from the suspension dowel pins holding the propeller blades and remove the dowel pins and the propeller blades. Clean all surfaces and then grease all the parts with proper grease. Use the Volvo Penta Special Grease. Especially the bearing surfaces on dowels and blades need careful greasing. Protect the hub of the propeller.</p>

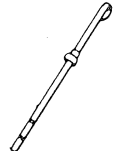LAYING-UP AND LAUNCHING

SERVICE IN CONNECTION WITH LAUNCHING	
 <p>14</p>	<p>If Volvo Penta diesel engine oil has been used, you only need to check the oil level in the engine and reverse gear and S-Drive. If preservative oil has been used, both the oil and the filter must be replaced. See "Service after every 50 hours of operation".</p>
 <p>15</p>	<p>Check the tightening of all hose-clamps. Check that all drain-cocks are closed.</p>
 <p>16</p>	<p>Install the battery or batteries, which must be fully charged. Grease the cable terminals. Fit the battery cables. Important! Do not mix the polarity. Tighten the cable terminals well.</p>
 <p>17</p>	<p>Following concerns folding propellers: Assemble the folding propeller, remove excess grease and check that the blades are folding easily. Grease the propeller hub. Check that all the zinc anodes are in good shape. Install the propeller.</p>
 <p>18</p>	<p>Paint the bottom of the boat with an anti-fouling paint. If the boat is equipped with the S-Drive model 110S it is important to check that the anti-fouling paint does not contain copper, which will cause damage due to corrosion on the S-Drive. Further paint the S-Drive with the Volvo Penta anti-fouling paint. NOTE! Do not paint the zinc anodes.</p>
 <p>19</p>	<p>Pump up fuel and vent the fuel system (see page 23).</p>

LAYING-UP AND LAUNCHING

 20	<p>Launch the boat. Start the engine. see instructions on page 5. Run the engine warm with the gear engaged. Check that there is no leakage of fuel, air or exhausts. Check that all functions for maneuvering are working properly.</p>
 21	<p>When necessary contact an authorized Volvo Penta Workshop and have their specialist make the service on engine and reverse gear or S-Drive in accordance with recommendations in the service scheme.</p>

FAULT TRACING SCHEME

TRACING FAULTS WHEN HAVING INTERRUPTIONS IN OPERATION

The fault tracing scheme given below lists only the most usual of faults that cause interruptions in operation. With the help of the instructions given in this handbook, the owner can generally remedy most of the faults listed below. When in doubt, always contact the nearest Volvo Penta workshop.

Follow the maintenance scheme's recommendations – it helps provide trouble-free operation.

Engine does not start	Engine stops	Engine does not reach correct operation speed at full throttle	Engine runs unevenly or vibrates abnormally	Engine becomes abnormally hot	REASON	See
●					Main switch not switched on, flat battery, brake in electric circuit or blown fuse	pages 5, 20, 21
●	●				Empty fuel tank, closed fuel cock, blocked fuel filter	page 22
●	●		●		Water, air or impurities in fuel	pages 21–23
●	●	●	●		Defective injectors	page 22
	●		●		Idling speed incorrectly adjusted	page 30
		●			Boat overloaded	page 3
		●			Marine growth on hull	page 3
			●		Damaged propeller	page 18
				●	Blocked cooling water intake, cooling jackets, defective impeller or thermostat	page 19

TECHNICAL DATA

Technical data

General

Engine designation	MD7A
Number of cylinders	2
Propeller shaft output ¹⁾ kW (HP) at 43,4 r/s (2600 rpm)	9,6 (13)
Max operating speed r/s (rpm)	43,3 (2600)
Cylinder diameter, mm (inches)	76,0 (2,99)
Stroke, mm (inches)	82,0 (3,23)
Displacement, dm ³ (in ³)	0,744 (45.4)
Compression pressure kp/cm ³ (psi) (starter motor speed)	20–24 (285–340)
Idling Speed r/s (rpm)	11–13 (650–780)
Direction of rotation looking at flywheel	clockwise
Max rearwards inclination, boat underway	15°
Max sideways inclination, boat underway	15°
Engine weight, incl reverse gear, kg (lbs)	175 (385)
Engine weight incl S-Drive model 110S, kg (lbs)	192 (423)

Valves

Valve clearance, hot engine:	
inlet, mm (in)	0,30 (0.012)
exhaust, mm (in)	0,30 (0.012)
Decompression device, max downwards movement of exhaust valve, mm (in)	0,5 (0.0197)

Lubrication system

Engine

Oil capacity, dm ³ (imp qts = US qts):	
incl filter	2,8 (2.5 = 2.9)
excl filter	2,5 (2.2 = 2.7)
Oil quality	Diesel Lubricating Oil CD
Viscosity:	
above +10°C	SAE 20 ²⁾
below +10°C	SAE 10 W ³⁾
Oil pressure, hot engine:	
idling speed, kp/cm ² (psi)	0,8–1,5 (14–21)
at full speed, kp/cm ² (psi)	3,5–4,0 (50–57)

MSB reverse gear with reduction gear:

Ratio, with reduction gear	1,91:1
Oil capacity, dm ³ (imp qts – US qts)	0,60 (0,5–0,6)
Oil quality (same as for the engine)	Diesel Lubricating Oil CD
Viscosity	See under engine above!

¹⁾ Propeller shaft output according to DIN Leusting B f&r Dauerbetrieb.

²⁾ Volvo Penta CD oil, Double grade.

³⁾ Volvo Penta CD oil, Single grade.

TECHNICAL DATA

S-Drive Model 110S

Ratio	1,66:1
Oil quantity, dm ³ (Imp qts – US qts)	2,3 (2,0–2,4)
Oil quality (same as for the engine)	Diesel Lubricating Oil CD
Viscosity	SAE 20 W/30 ²⁾

Cooling System

Thermostat opens at °C/°F	60/140
fully open °C/°F	75/167

Fuel System

Injection pump, make	CAV (model DPA)
Feed pressure, kp/cm ² – psi	0,75 (11)
Opening pressure kp/cm ² – psi	180–188 (2560–2675)
Pre-injection angle, crankshaft degrees BTDC	10°–12°

Electrical system

Battery voltage, volt	12
Battery capacity, max Ah	70
Starter motor rating, kW (Hp)	0,8 (1,1)
Alternator rating, A (W)	35 (420)
Battery electrolyte spec.grav.:	
Charging to be carried out at g/cm ³	1,230
Fully charged battery, g/cm ³	1,275–1,285


Torques

Stud bolts cylinder head (M10x1,5), Nm (kpm)	20 (2)
Cylinder head nuts (M10x1,0), Nm (kpm)	70 (7)
Connecting rod bolts (M10x1,5), Nm (kpm)	70 (7)
Crankshaft main bearing (M10x1,5), Nm (kpm)	8 (0,8)
Flywheel nut (M16x2), Nm (kpm)	180 (18)

WIRING DIAGRAM

Cable colour code

Mark.	Colour	mm ²	AWG
A	White	6	9
B	Black	1,5	15
B'	Black	0,6	19
B''	Black	0,75	18
C	Red	6	9
C'	Red	35	1
C''	Red	0,6	19
F	Yellow	1,5	15
G	Brown	1,5	15
H	Blue	4	11
H'	Blue	35	1
I'	Green/Red	0,75	18
J	Green	1,5	15
J'	Green	0,6	19
J''	Green	0,75	18
K	Blue/Yellow	0,75	18
L	White/Red	0,75	18
M	Blue/Red	0,75	18

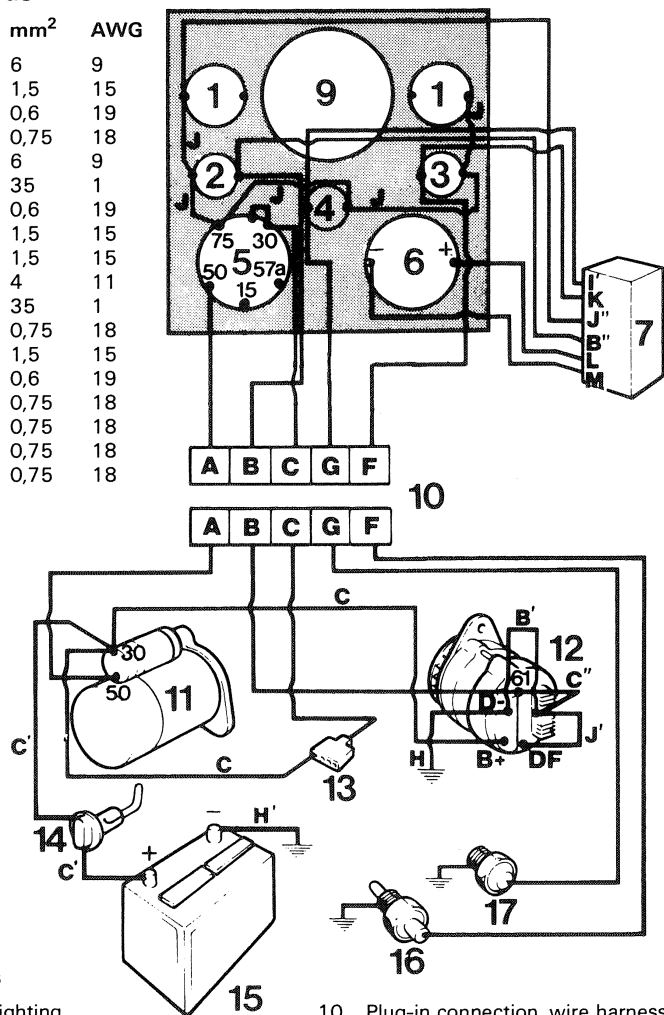

List of components

1. Switch, extra lighting

2. Warning lamp, no battery charging

3. Warning lamp, high temperature

4. Warning lamp, low oil pressure

5. Key switch

6. Buzzer

7. Alarm-unit

9. Location extra instrument
10. Plug-in connection, wire harness

11. Starter motor

12. Alternator

13. Fuse box

14. Main switch

15. Battery

16. Sender, temp.

17. Sender, oil press

ON BOARD DATA

LOA = m (ft.) Beam = m (ft.). Draught = m
(ft.). Height above waterlines = m (ft.). Displacement =
 Fuel tank cap. = l (Imp.gals. = US gals.). Water tank =
 l (Imp.gals. = US gals.). Battery cap., std. circuits = Ah.
Battery cap., opt. equipment circuit = Ah.

The light bulbs have the following wattage:

Instruments: W. Cabin: W. Pentry: W. Toilet: W.
Compass: W. Ports./Starboard lights: W. Stern lights: W.
Masthead lights: W. Searchlight: W. Cockpit: W.

The tool kit and the spare parts kit contain the following:

CHECKS AND SERVICE HAVE BEEN CARRIED OUT AS FOLLOWS:

50 hour intervals


dat / -by
dat / -by
dat / -by
dat / -by
dat / -by
dat / -by
dat / -by
dat / -by

100 hour intervals


dat / -by
dat / -by
dat / -by
dat / -by
dat / -by
dat / -by
dat / -by
dat / -by

ENGINE COMPONENTS GUIDES

MD7A with reverse gear model MSB

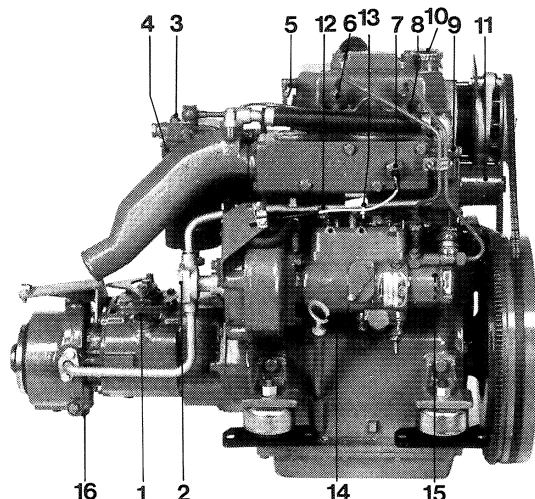



21. Oil drainage, revers- and reduction gear
22. Oil filter
23. Sender, low oil pressure
24. Control cable bracket
25. Shift lever
26. Water cooled exhaust elbow
27. Sea water pump
28. Fuel injection pump
29. Oil drainage, S-Drive
30. Zinc anode
31. Alternator
32. Closed crankcase ventilation
33. Oil dipstick and oil filler hole, S-Drive
34. Closing cock for incoming cooling water
35. Flexible engine mounting
36. Flexible rubber seal between S-Drive and engine foundation
37. Cooling water intake, S-drive
38. Engine foundation
39. Starter motor

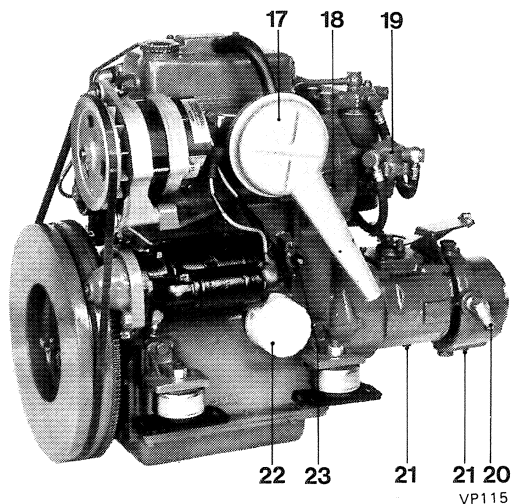

1. Oil dipstick and oil filler hole and oil scavenging reverse gear
2. Cover, cooling water pump
3. Venting screw, fine-filter
3. Venting screw, fine-filter
4. Fine-filter
5. Decompression lever
6. Fuel pressure line nut
7. Sender, temp gauge
8. Injector
9. Thermostat housing
10. Oil filler hole, engine
11. Hand starter
12. Stop device
13. Speed lever
14. Oil dipstick, oil scavenging engine
15. Cooling water drainage, engine
16. Cooling water drainage, reverse gear
17. Air filter and air intake silencer
18. Sender, tachometer
19. Fuel pump (with hand priming device)
20. Cooling water intake, reduction gear

ENGINE COMPONENT GUIDES

MD7A/110S

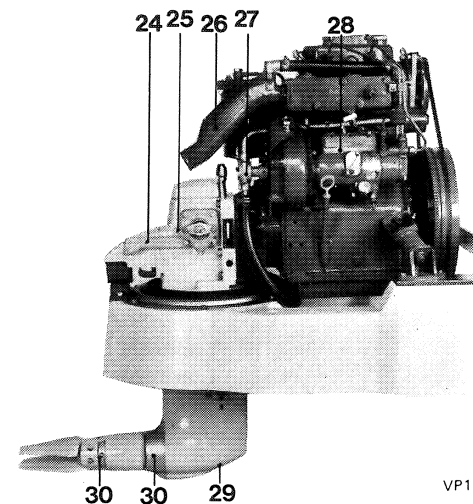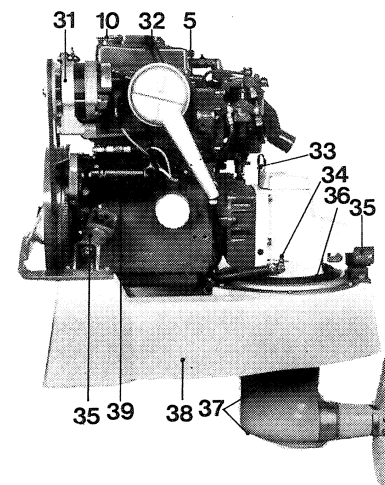

Positions explained on page 34.

INDEX, ALPABETICAL ORDER

A
Alternator 21, 20

B
Battery 14, 20
Belt tension 14, 18

C
Charging regulator 7, 20
Checks and Service
 Scheme 12
Controls 2
Cooling system 9, 19
Cylinder head nuts 18

D
De-inhibiting 27
Draining cocks 34, 35

E
Electrical system 8, 20, 32
Engine body 8
Engine component guides ... 34, 35
Engine speed 3

F
Fault tracing scheme 29
Fine-filter 21, 22, 34
Fuel 3
Fuel filter 21, 22
Fuel pump 22
Fuse box 21

H
Hand priming pump 23, 34
Hand starter 5

I
Inhibiting 24–28
Injectors 22
Impeller 19
Instruments 2

L
Launching 27
Lubricating oil 3
Lubricating system 8

M
Main switch 5, 20

O
Oil changing 15, 16
Oil dipstick, rev gear 13
 engine 13
 S-Drive 14
Oil filter 17
Oil lever checking 13

P
Preparations before starting 4

R
Reverse gear 10
Running 6

S
Safety equipment 4
S-Drive model 110S 11
Sea water pump 19
Spare battery 20
Starting 5
Starter motor 21

T
Technical Data 30, 31
Thermostat housing 34, 35

V
Valve clearance 16
Venting (fuel system) 23

W
Wiring diagram 32

NOTES

Personal information

Name
Address

Nearest Volvo Penta service workshop

Name
Address
Telephone

Engine Information

Engine type
Engine no.
Reverse gear type Ratio
Reverse gear, or S-drive, serial no
Propeller size

IMPORTANT INFORMATION

Warning!

Stop the engine before opening the hatch to the engine compartment. An engine which is in operation has rotating and moving parts which it is dangerous to touch.

Bear in mind the risk of a fire. All engine fuel is potentially flammable. Let an expert correct any faults in the fuel system and always use genuine Volvo Penta spare parts.

Frost Risk

The cooling system is filled with liquid and it should be drained when there is risk of frost. Note that in certain cases a suction action may occur when the sea-water system is being drained. Close all drainage points when the boat is not under constant supervision. Any incorrectly performed drainage can cause the boat to become filled with water and sink. Also bear in mind that the fresh water tank and the toilet can be damaged by frost.

To be Checked

The steering gear and controls must function perfectly and their operation should be checked at regular intervals. Never take any chances if you suspect that something is wrong. Take immediate action to remedy faults.

All rubber ages, so check all rubber parts at regular intervals. Parts which are of special importance are the fuel hoses and those rubber parts which have to do with the boat's flotation ability. If the hoses feel dry and hard or display any tendencies to crack they should be replaced immediately.

Safety Onboard

Check safety materials onboard. Run through in your mind what can happen and let yourself and your crew practice drills to cope with events that you know can happen. You will benefit by being prepared if anything does happen. If you take good care of your boat and its engine the risk of anything happening is a small one. Read the instruction book – before it happens.

**AB VOLVO PENTA
S-405 08 Gothenburg
Sweden**

Printed in Sweden by MINAB, Surte 1980.0961

VOLVO PENTA

AB Volvo Penta

SE-405 08 Göteborg, Sweden

www.volvopenta.com

7732492 08-1980